


The methanol extraction tool kit contains everything needed to perform methanol extraction for 5 samples. The methanol kit is contained in a sturdy, foam-lined case.

www.defiant-tech.com

505-999-5880

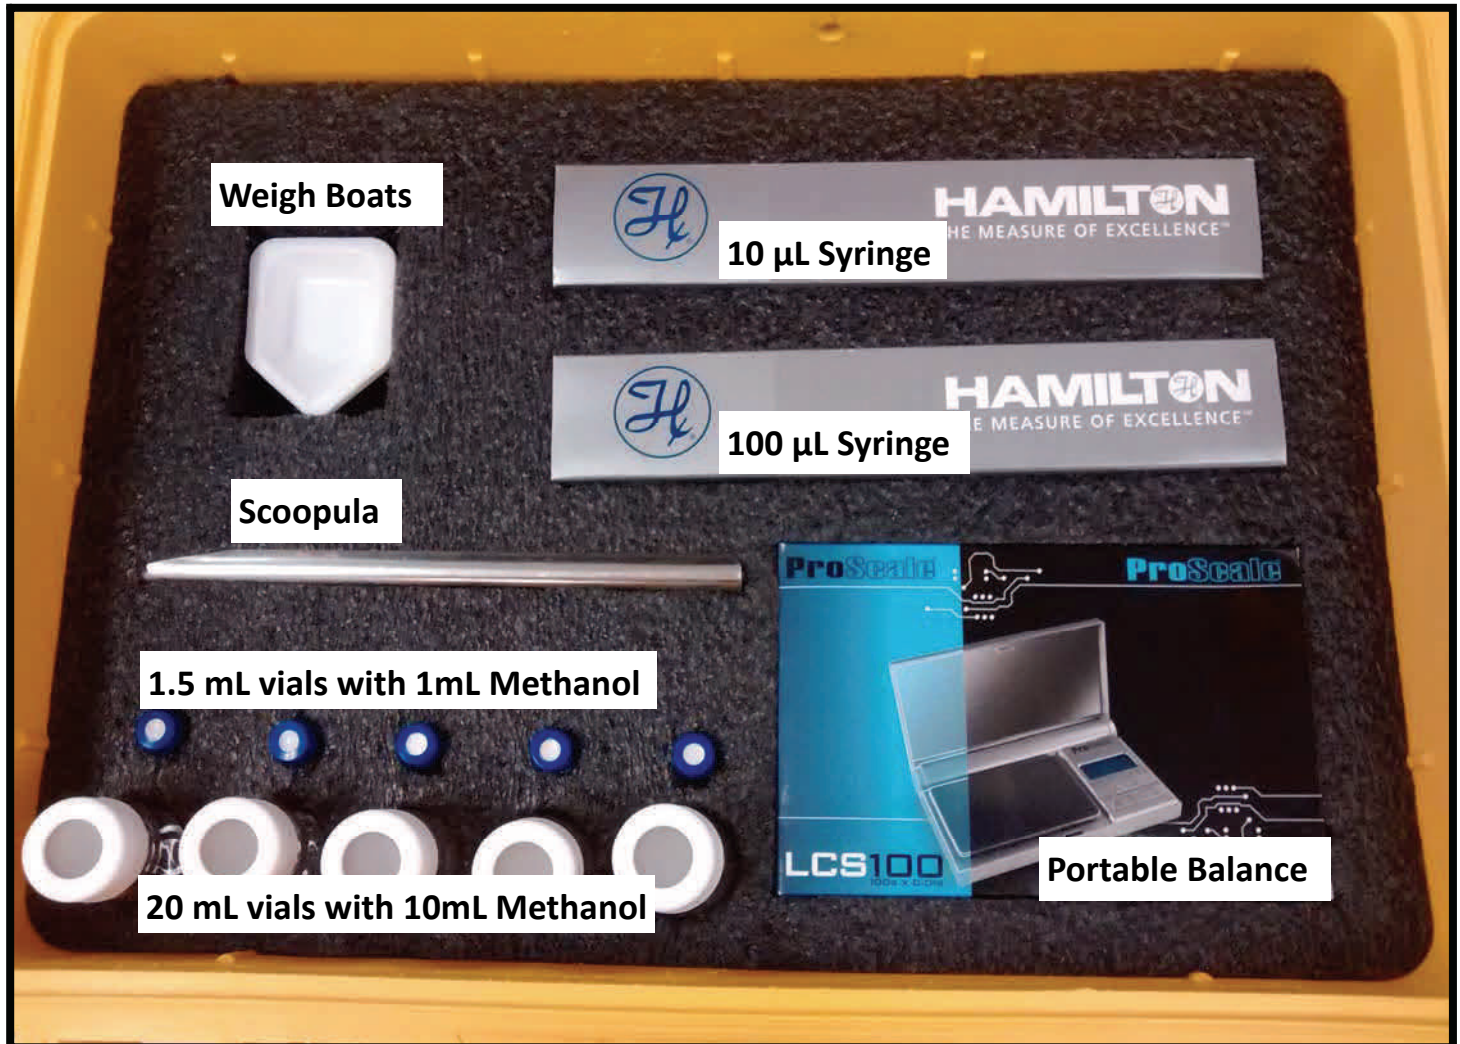

List of Contents:

Qty 10-Weigh Boats

100µL Glass Syringe

10µL Glass Syringe

Scoopula

Portable balance

Qty 5-1.5 mL vials filled with 1mL purge and trap grade methanol (for performing additional extract dilutions)

Qty 5-20 mL vials filled with 10mL purge and trap grade methanol (for performing methanol extraction)

The scoopula is used to transfer soil into a weigh boat on the portable balance. Then the soil may be placed in a 20mL VOA vial with 10mL of methanol in it. The 100 uL syringe can be used to inject the methanol extract into 5mL of water for analysis on the FROG. If further dilution is needed, the 10 uL syringe can be used to transfer 10uL into the 1.5mL vials that contain 1mL of methanol.